


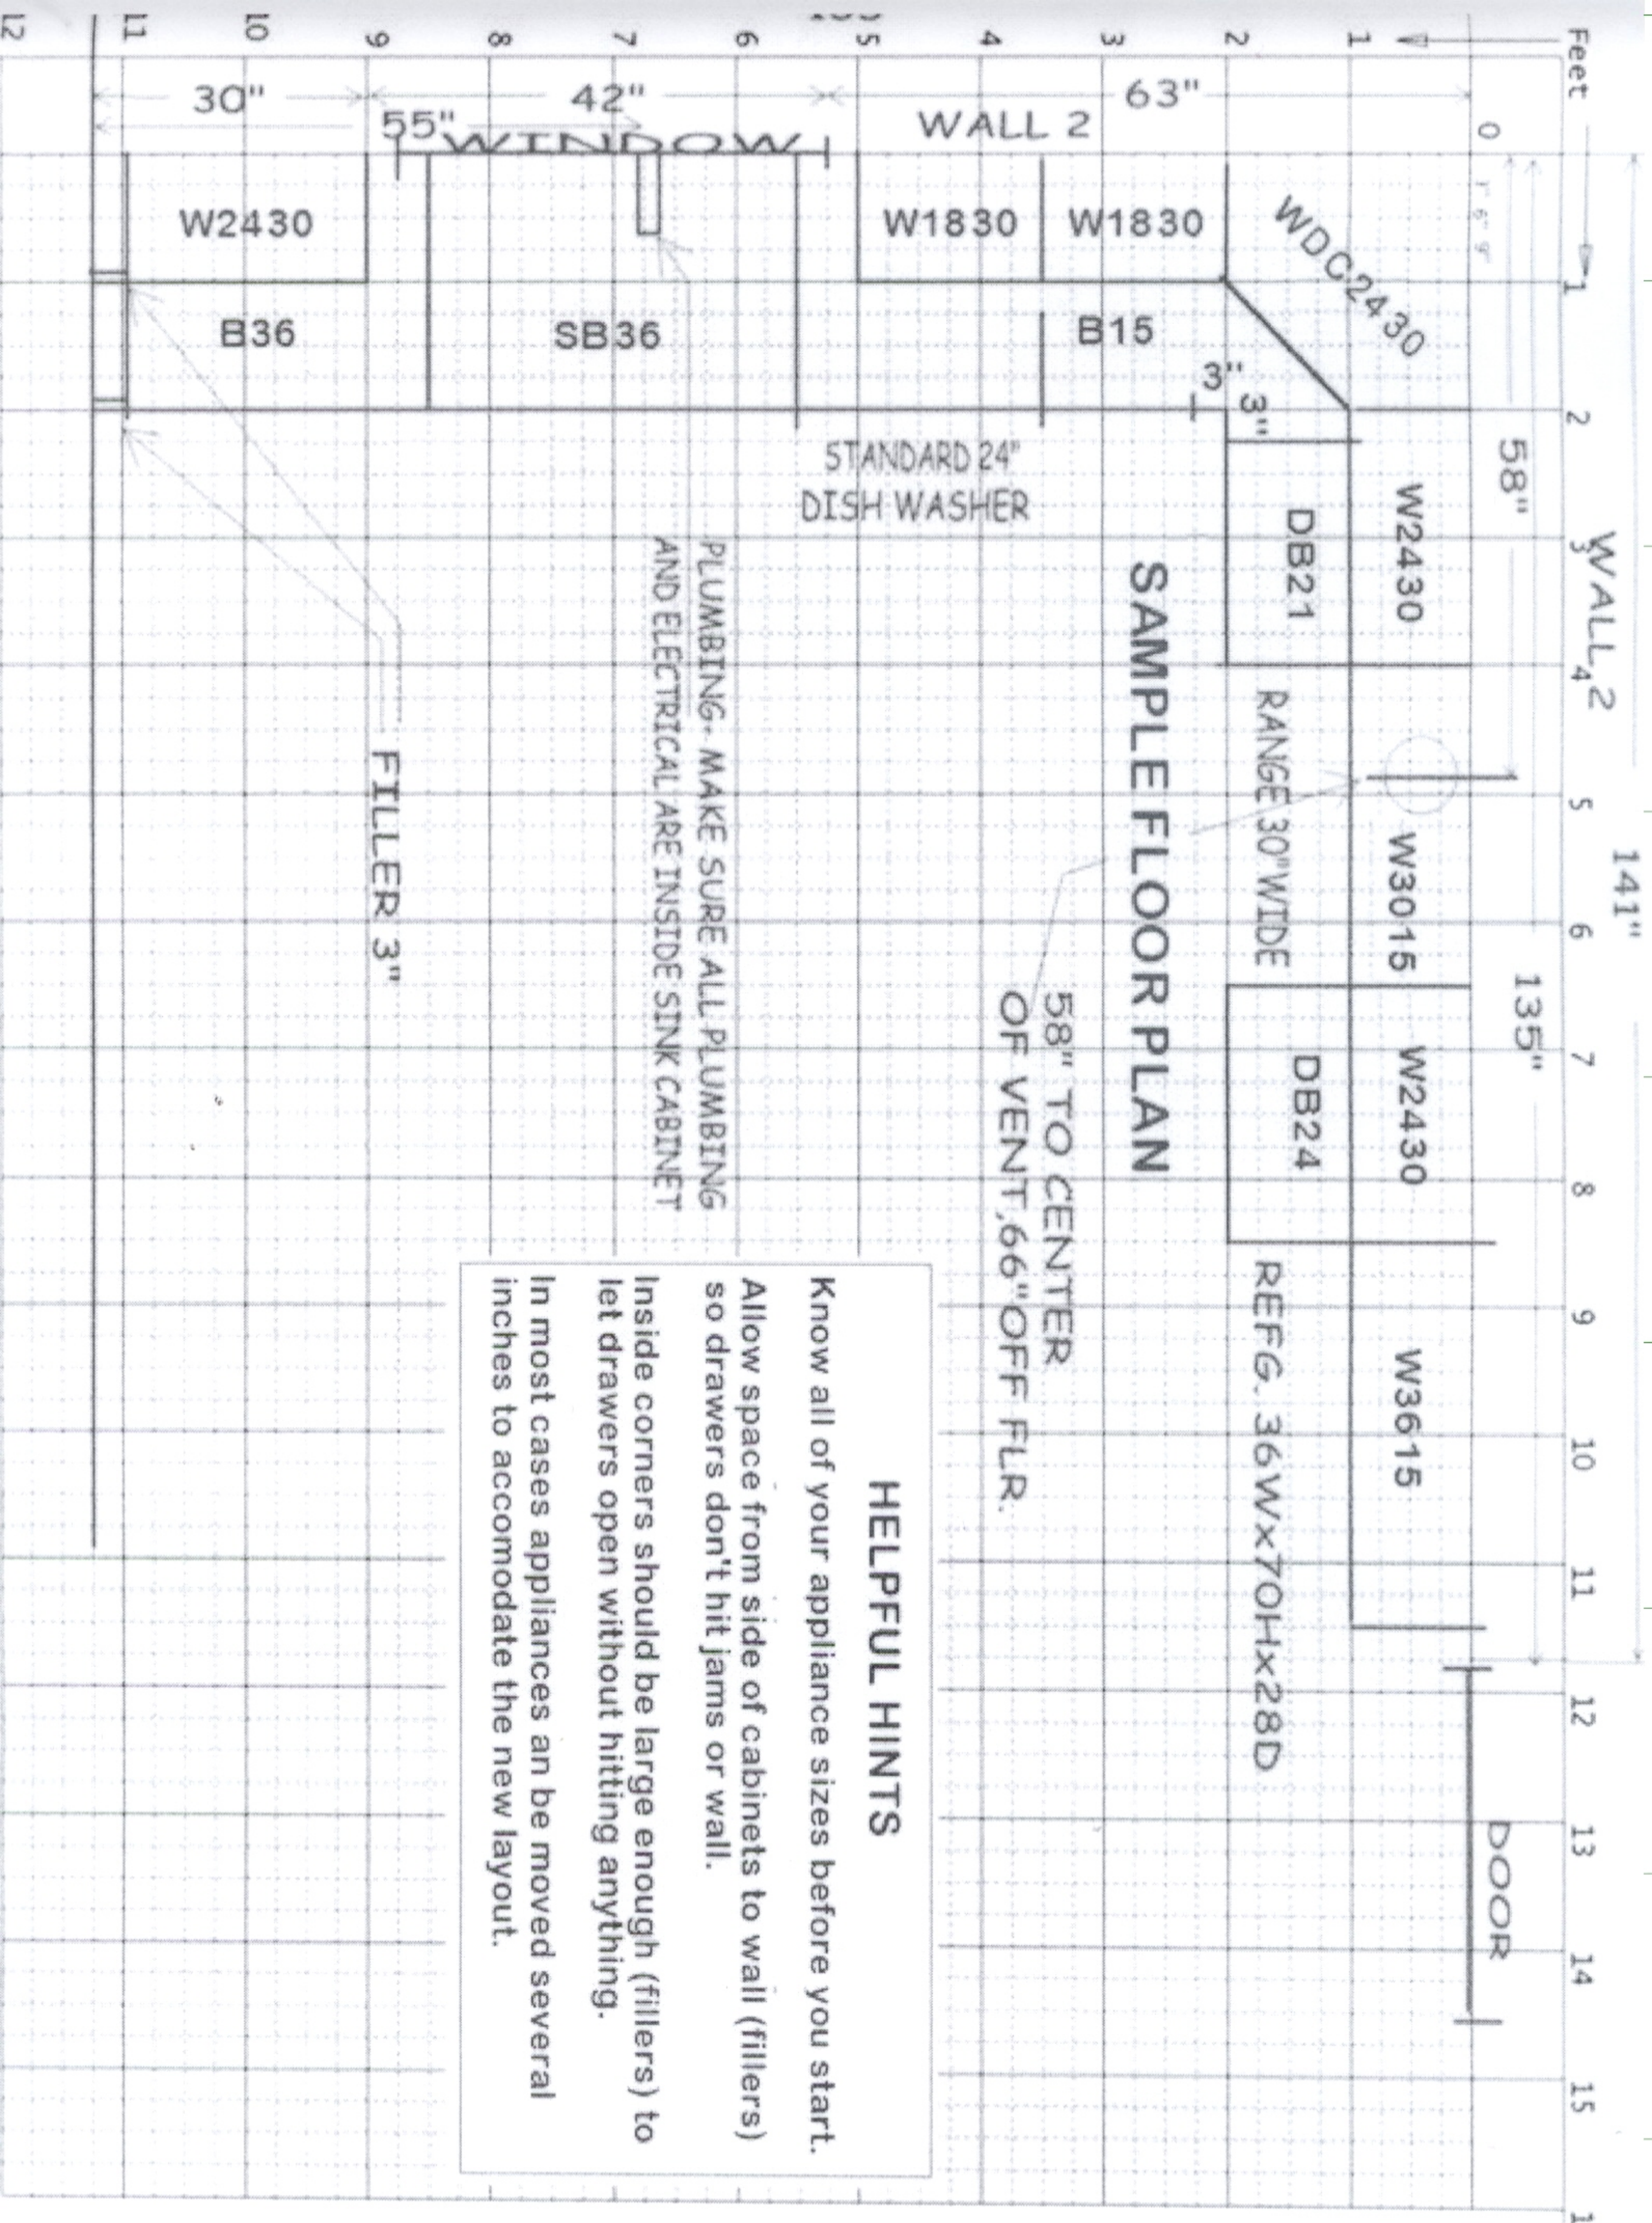

SAMPLE FLOOR PLAN

58" TO CENTER
OF VENT, 66" OFF FLR.

HELPFUL HINTS

Know all of your appliance sizes before you start.
Allow space from side of cabinets to wall (fillers) so drawers don't hit jams or wall.
Inside corners should be large enough (fillers) to let drawers open without hitting anything.
In most cases appliances can be moved several inches to accomodate the new layout.